



YOKE ASSIGNMENTS (MOST JOYSTICKS)

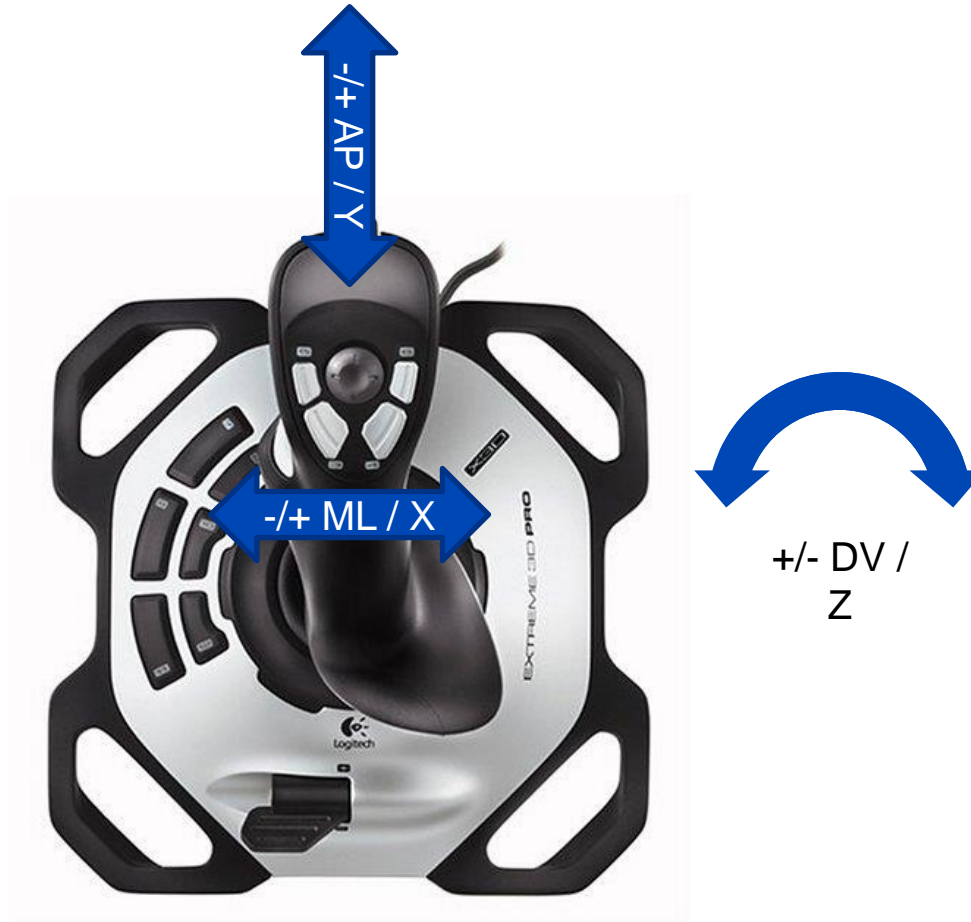

BUTTON ASSIGNMENTS (LOGITECH)

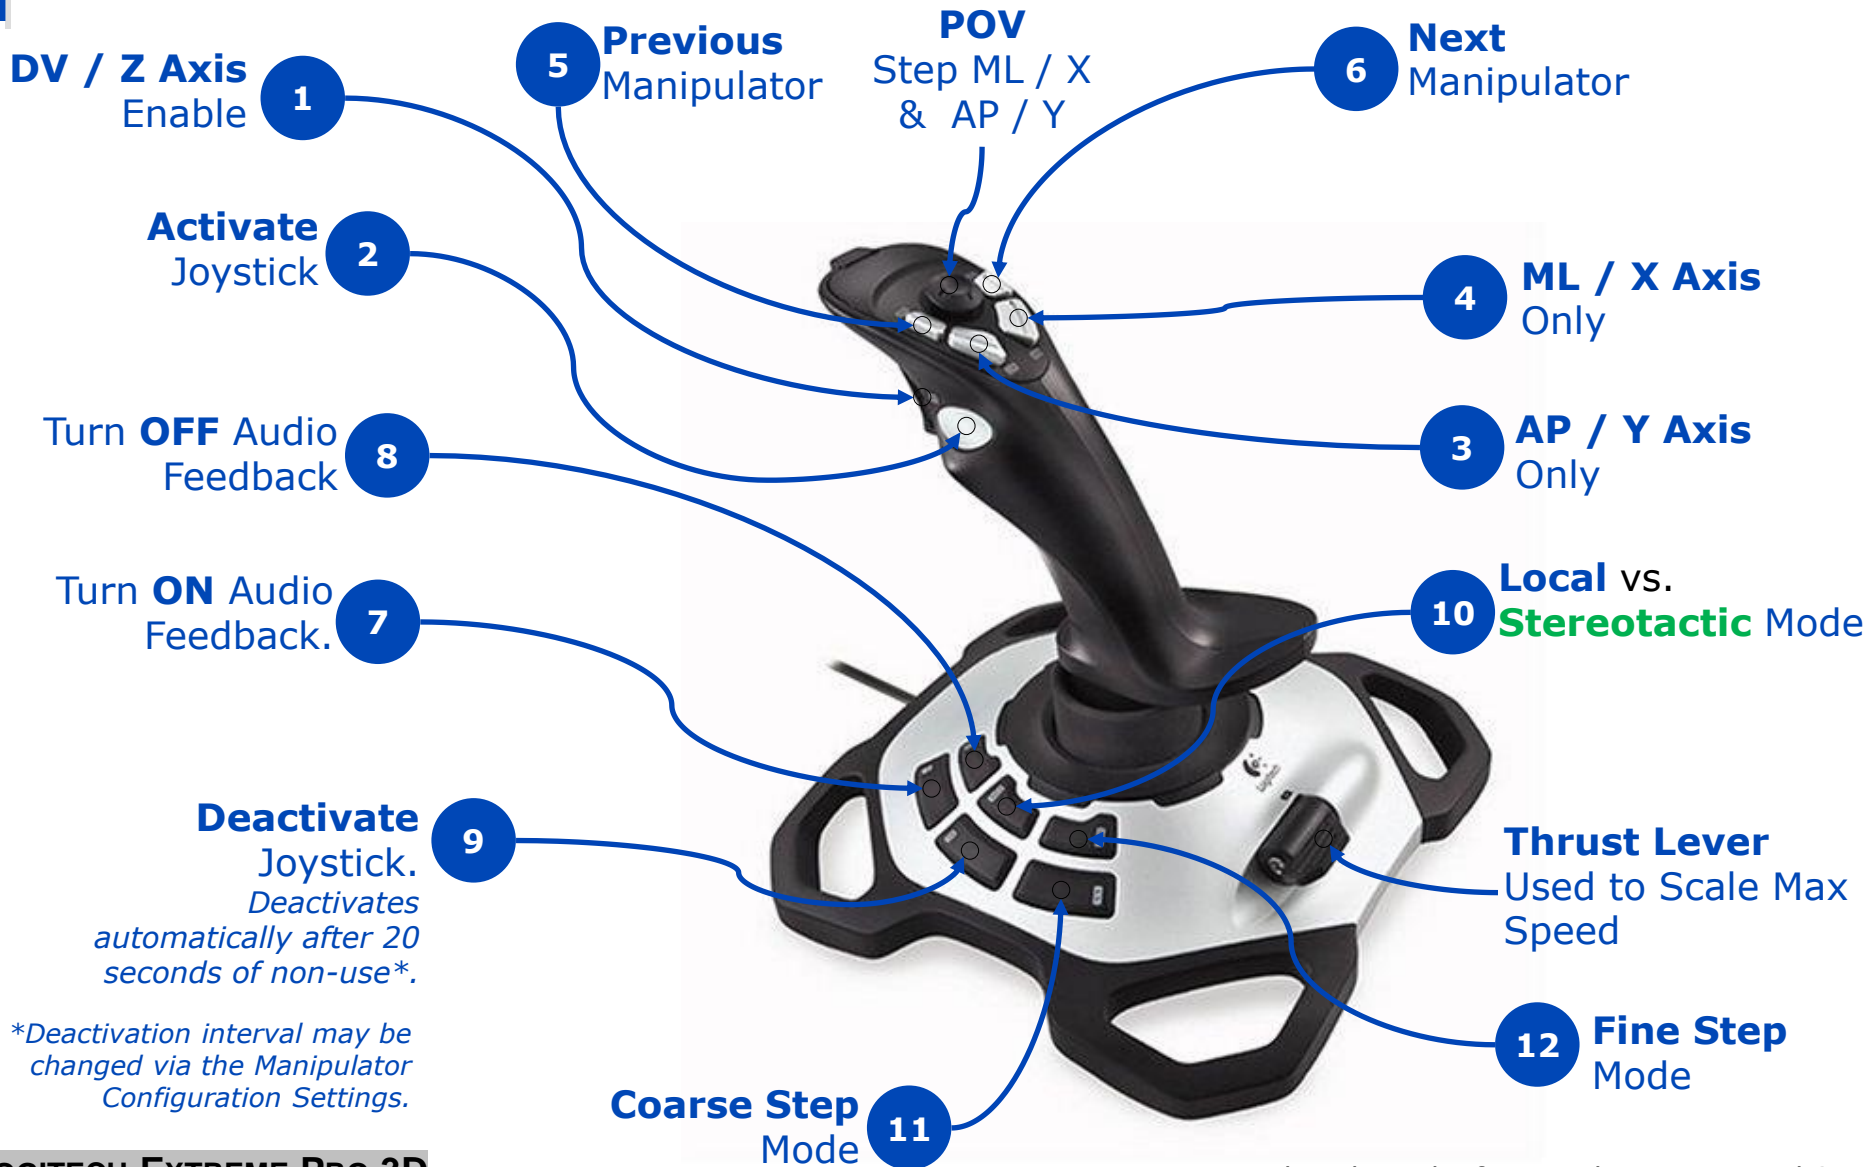

*Deactivation interval may be changed via the Manipulator Configuration Settings.

BUTTON ASSIGNMENTS (THRUSTMASTER)

2 AP / Y Axis Only

4 ML / X Axis Only

3 Activate Joystick

POV
Step ML / X
& AP / Y

1 DV / Z Axis Enable

Turn **OFF** Audio Feedback **8**

Turn **ON** Audio Feedback **7**

6 Next Manipulator

12 Fine Step Mode

5 Previous Manipulator

11 Coarse Step Mode

9 Deactivate Joystick.

Deactivates automatically after 20 seconds of non-use.*

10 Local vs. Stereotactic Mode

Thrust Slider
Used to Scale Max Speed

**Deactivation interval may be changed via the Manipulator Configuration Settings.*

BUTTON ASSIGNMENTS (XBOX/EASYSMX)



XBOX OR EASYSMX® GAME CONTROLLER

Xbox is a trademark of the Microsoft group of companies

EasySMX is a registered trademark of Shenzhen Yisuma Network Technology Co.,Ltd