

Precision lens motion control
for high-performance board cameras

M3-F focus modules in camera system design

New Scale M3-F custom focus modules mount directly to a printed circuit board over a CCD or CMOS image sensor. These compact modules add precision focus without adding size to board camera systems. They accept high-level motion commands directly from your ISP - no additional control board is needed.

Accepting standard threaded lens assemblies from M8 to M12, the focus module is only slightly larger than the lens assembly. It provides millimeters of lens motion with 0.5 micron resolution.

The M3-F is a single-lens system with embedded closed-loop drive for high repeatability with low external processing requirements.

Applications

Board cameras are used for compact camera systems in security, medical and industrial applications. They typically consist of a CCD or CMOS sensor mounted on a small printed circuit board, with a fixed lens mounted over the sensor.

Replacing the fixed lens with a focus system provides significant benefits. It enables better image quality over a wider depth of field, increasing system accuracy. It enables macro imaging as well as wide field imaging with the same camera, allowing greater distance (and greater variation in distance) between the camera and the object being imaged. Applications include:

- **Biometric imaging.** Focus enables detection from a greater distance. The system can obtain a more accurate iris, face or fingerprint match with less time and effort on the part of the user.
- **Medical.** Focus enables faster and more accurate sample analysis in diagnostic systems. In endoscopic imaging, it speeds readings by reducing the amount of time required to align the scope.
- **Machine vision systems.** Focus allows greater variation in the type or alignment of object scanned.
- **Ultra-compact high-resolution security cameras.** Focus allows convenient and rapid field and/or remote focal adjustment, especially important with high-resolution cameras where camera accessibility is limited.

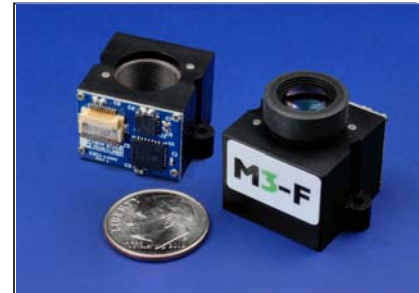


Figure 1: the compact M3-F focus module is a complete lens motion system – no external control board is needed.

Use it to move high-quality glass or polymer lenses with high precision, for superior image quality compared to non-traditional lenses.

The closed-loop system has high repeatability, low dependence on temperature and no hysteresis

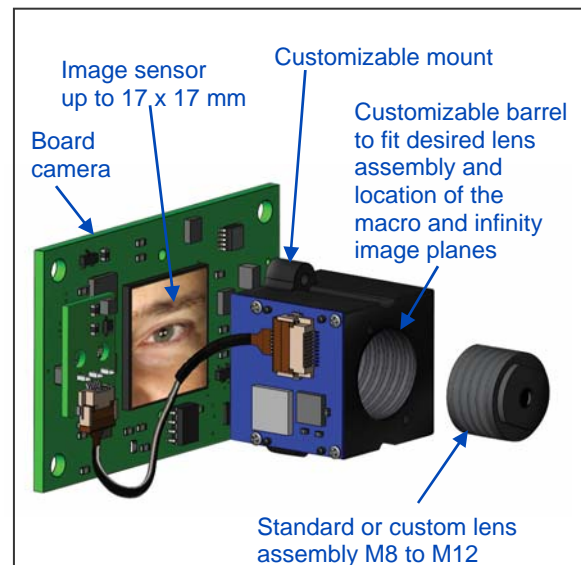


Figure 2: The M3-F focus module mounts easily over the image sensor on compact board cameras, and accepts high-level motion commands from the system processor. The module can be rapidly customized to fit a wide range of board cameras and standard lens assemblies.

Advantages over other focus systems

Alternative focusing systems such as liquid lenses or liquid crystal lenses rely on the ability to control changes in composite materials: e.g., the curvature of a liquid-oil interface in a container, or the refractive properties of a liquid crystal composite. These composite systems are highly dependent on material consistency and environmental factors such as temperature. In addition, their transmission and clarity is far inferior to that of traditional glass or polymer lenses.

The M3-F focus module allows you to move traditional, high-quality lenses with high resolution, repeatability and accuracy. As a closed-loop system, it can be easily calibrated and controlled for high accuracy and repeatability independent of temperature. It does not exhibit the hysteresis characteristic of liquid crystal lenses.

The M3-F is a cost-effective system solution with embedded closed-loop drive circuit for high repeatability with low external processing requirements. It operates on 3.3 V with low power requirements and holds focus with the power off.

M3-F advantages over liquid lens solution:

- Easier integration – no external control board
- Uses a single glass or polymer lens for superior transmission and clarity
- No hysteresis
- Less temperature dependency
- Configurable product platform vs. unique custom design for each camera

M3-F advantages over stepper solution:

- Smaller size
- Superior tip/tilt specification
- Higher resolution
- Higher repeatability

M3-F customizable module description

New Scale's M3-F focus module can be quickly adapted to fit a wide range of image sensor, board and lens combinations. The M3 platform offers flexibility to accommodate specific board mounting, lens travel (macro to infinity), lens thread and motion control needs. This enables OEMs to create high-performance camera solutions in less time and at lower cost.

Each M3-F module incorporates a piezoelectric SQUIGGLE micro motor, drive ASIC, magnetic NSE-5310 position sensor and a microprocessor in a robust polymer housing with a moving lens holder (Fig. 3). The customer defines the PCB mechanical mounting interface, dimensions of the threaded lens assembly, and the macro and infinity image plane locations. Housing dimensions are approximately 20 x 22 x 16 mm depending on OEM specifications.

System description

A block diagram for a focus module in a board camera system is shown in Fig. 4. The focus module mounts on the OEM's camera PCB, over the image sensor. The SQUIGGLE motor moves the lens barrel. The NSE-5310 position sensor detects the movement of a multi-pole magnetic strip attached to the lens barrel, and provides the direct digital position information to the microprocessor.

The NSD motor controller ASIC accepts commands from the processor via I²C or SPI interface, and drives the motor. The system operates on standard 3.3 V battery power. Additional detail about the components follows.

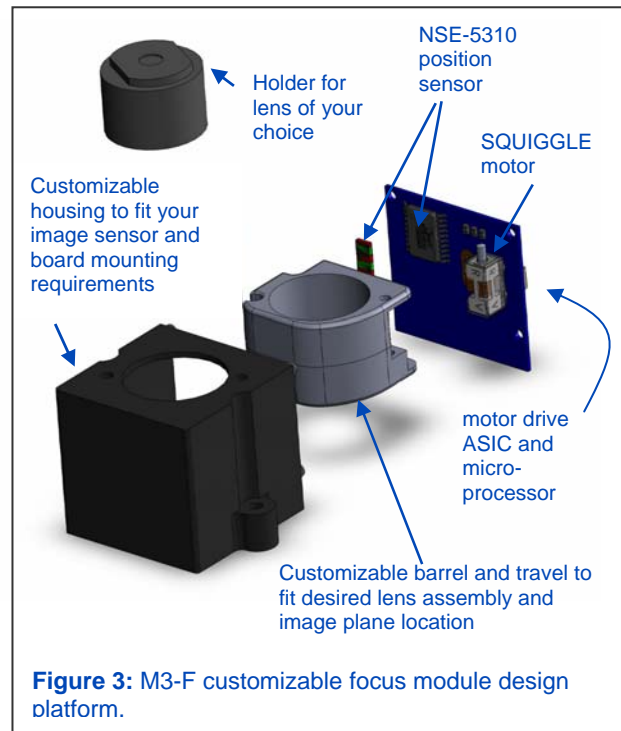


Figure 3: M3-F customizable focus module design platform.

Micro motor

A patented SQUIGGLE micro motor provides high-precision linear motion, with no gears and no need for lubrication. It holds its position without drawing any power. Its high speed enables rapid focus, further reducing power use and improving the user experience. This robust piezoelectric device offers quiet, ultrasonic operation. It is smaller, more power-efficient and more precise than stepper motors.

Position sensor

The NSE-5310 is a magnetic sensor array with integrated on-chip digital encoding. It measures the spatially-varying magnetic field produced by a moving magnetic strip mounted on the lens holder, and provides direct digital output of the absolute linear position within a 2 mm range. It does not require a light source or a separate zero-reference sensor. There is no need to hunt for zero position on power-up, resulting in lower power use and less wait time to capture images.

Motor driver ASIC

The NSD piezo motor driver ASIC is powered by a single 3 V battery. Like the sensor, it uses a standard I²C interface for integration with the system processor. It creates pairs of phase-shifted square waves to drive the motor. On-chip registers store driver instructions. A power-down mode provides for minimal power consumption in stand-by.

Resolution, repeatability and accuracy

A variety of algorithms are used for autofocus. One involves moving the lens through its entire range and identifying the lens location which delivers the best image quality. The system may capture images at multiple points in the process and keep the best image; in this case the motion step and settle time are primary concerns. Alternatively, the system may identify the optimum position for focus and then move the lens back to that position for final image capture. In this case, the primary motion concerns are resolution, repeatability and accuracy. These are discussed below.

Resolution



Position resolution determines the minimum resolvable distance the lens can move. In the M3-F this is 0.5 μm , providing excellent fine control over the lens motion.

Repeatability

Repeatability is a measure of the system's ability to return the lens to a previously defined position. In many algorithms, better repeatability means better focusing.

The direction in which the target position is approached impacts repeatability (Fig. 5). Unidirectional positioning, in which the target position is approached from the same direction every time, provides better repeatability.

Figure 6 shows data from an M3-F error and repeatability measurement. For this measurement the

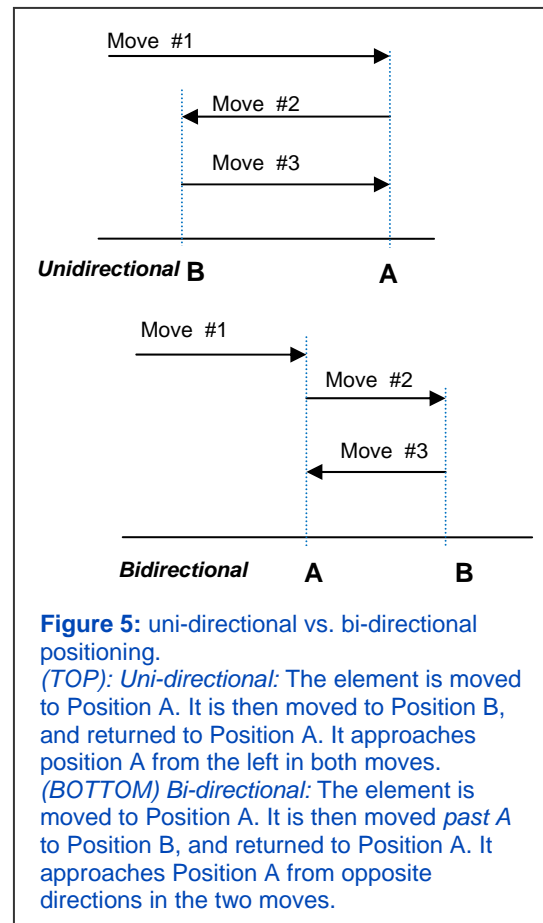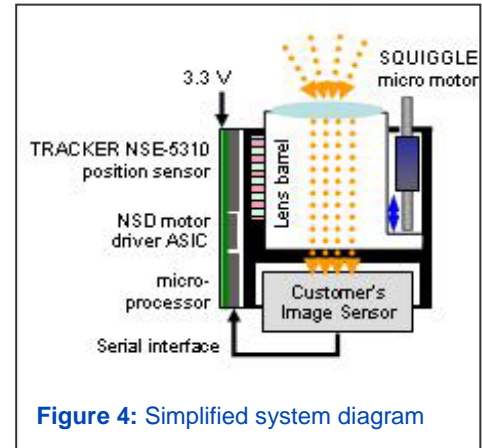

M3-F's integrated motion system is used to drive the lens to a series of target points, forward and reverse, over its full travel range. The process was performed twice.

The X axis shows the recorded lens position after each commanded move, as measured by a reference position sensor (Keyence).

The Y axis shows position error for each target point, that is, the difference in lens location measured by the reference sensor vs. that measured by the M3-F's integrated position sensor.

The pink curve shows lens position error while traveling in the forward direction.

The gold curve shows the error for each of the same positions while traveling in the reverse direction.

Repeatability is the deviation of actual position measured by the reference sensor at each of the target positions.

The graph illustrates repeatability by the vertical difference between the curves. The difference of the curves while traveling in the same direction is less than the difference while traveling opposite directions.

Consider an imaging application where the image processor collects a series of evaluation images along the full travel of the lens while moving in the forward direction, from end to end (in an image resolution hill climbing algorithm). At the end of that series of image captures, the lens location is on the pink curve at position $1500\mu\text{m}$. If the processor determined that the optimal focus position is at $850\mu\text{m}$ (on the X axis) we need to move the lens back to the $850\mu\text{m}$ position to capture the final image. We have two scenarios:

1. We can simply reverse direction and stop at the $850\mu\text{m}$ position. The actual variance from the optimal position could be up to $6\text{--}7\mu\text{m}$ (bidirectional repeatability).
2. We can move in the reverse direction, travel past the $850\mu\text{m}$ position, and then move in the forward direction to stop at the $850\mu\text{m}$ position. The variance from the target position would be reduced to a maximum of approximately $1\mu\text{m}$ (uni-directional repeatability).

Scenario 2, with better repeatability, will result in images with better contrast than scenario 1. The product designer would need to evaluate this higher contrast vs. the impact of the additional lens motion on focusing speed.

Accuracy

Accuracy is measured by the total error in the system. For the test data in Figure 6, that would be the range from the peak of $15\mu\text{m}$ on the forward direction curve, to the peak of -4 on the reverse direction curve, or a total of about $19\mu\text{m}$. The module specification is $\pm 30\mu\text{m}$. However, the M3-F module is calibrated and includes control software in the module that compensate for the error. Accuracy is therefore not a concern with the M3-F in an autofocus system.

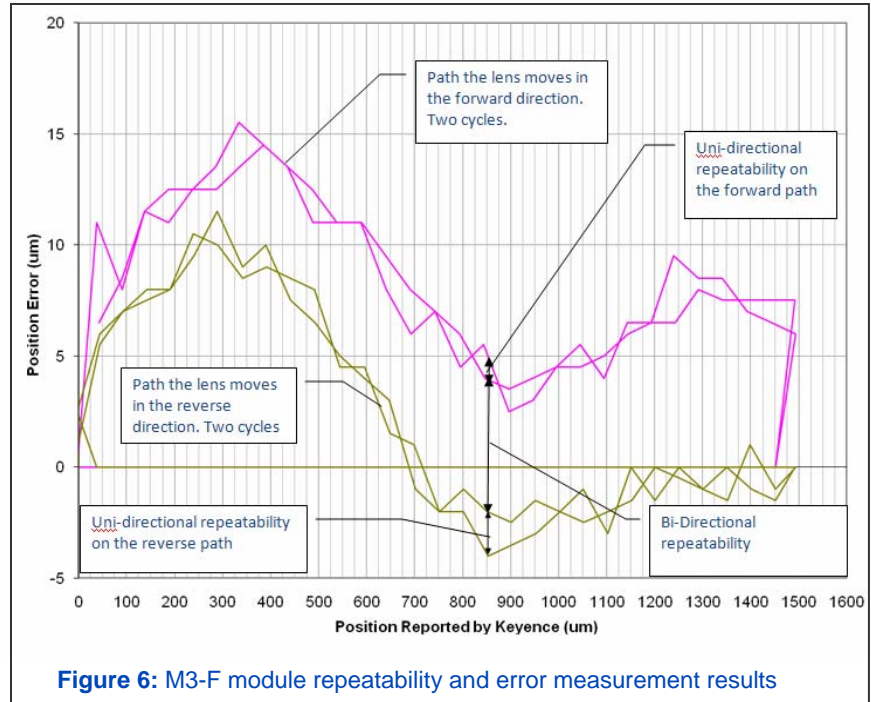


Figure 6: M3-F module repeatability and error measurement results

Mechanical integration

The standard focus module in an M3-F developer's kit can accept a broad range of lenses and accommodate image sensors up to 17 x 17 mm including 1/2" and 1/1.8" formats. Please refer to the design note, [Checking Optical and Imager Geometry in DK-M3-F](#), for lens recommendations and guidelines for determining your image sensor and lens compatibility.

These standard modules can be used in volume in OEM systems, or New Scale can quickly customize M3-F modules to accommodate OEM requirements not met by the standard design. See the on-line custom specification worksheet at http://www.newscaletech.com/contact_AF-RFP.aspx.

Electrical integration

M3-F modules require input voltage of 3.1 to 3.6 V. They are configured for standard SPI or I2C serial interface. Details on communication formats and the command set are found in the [M3-F Command and Control Reference Guide](#) (registration required).

Specifications

Specifications for standard M3-F modules and developer's kits are found at www.newscaletech.com/M3-F.html. New Scale offers custom motion systems to meet other OEM specifications as needed.

For more information

For further information, please contact our sales office at +1 585 924-4450 or email sales@newscaletech.com.